

Kit Components




Lock Installation Location - Sash Profile

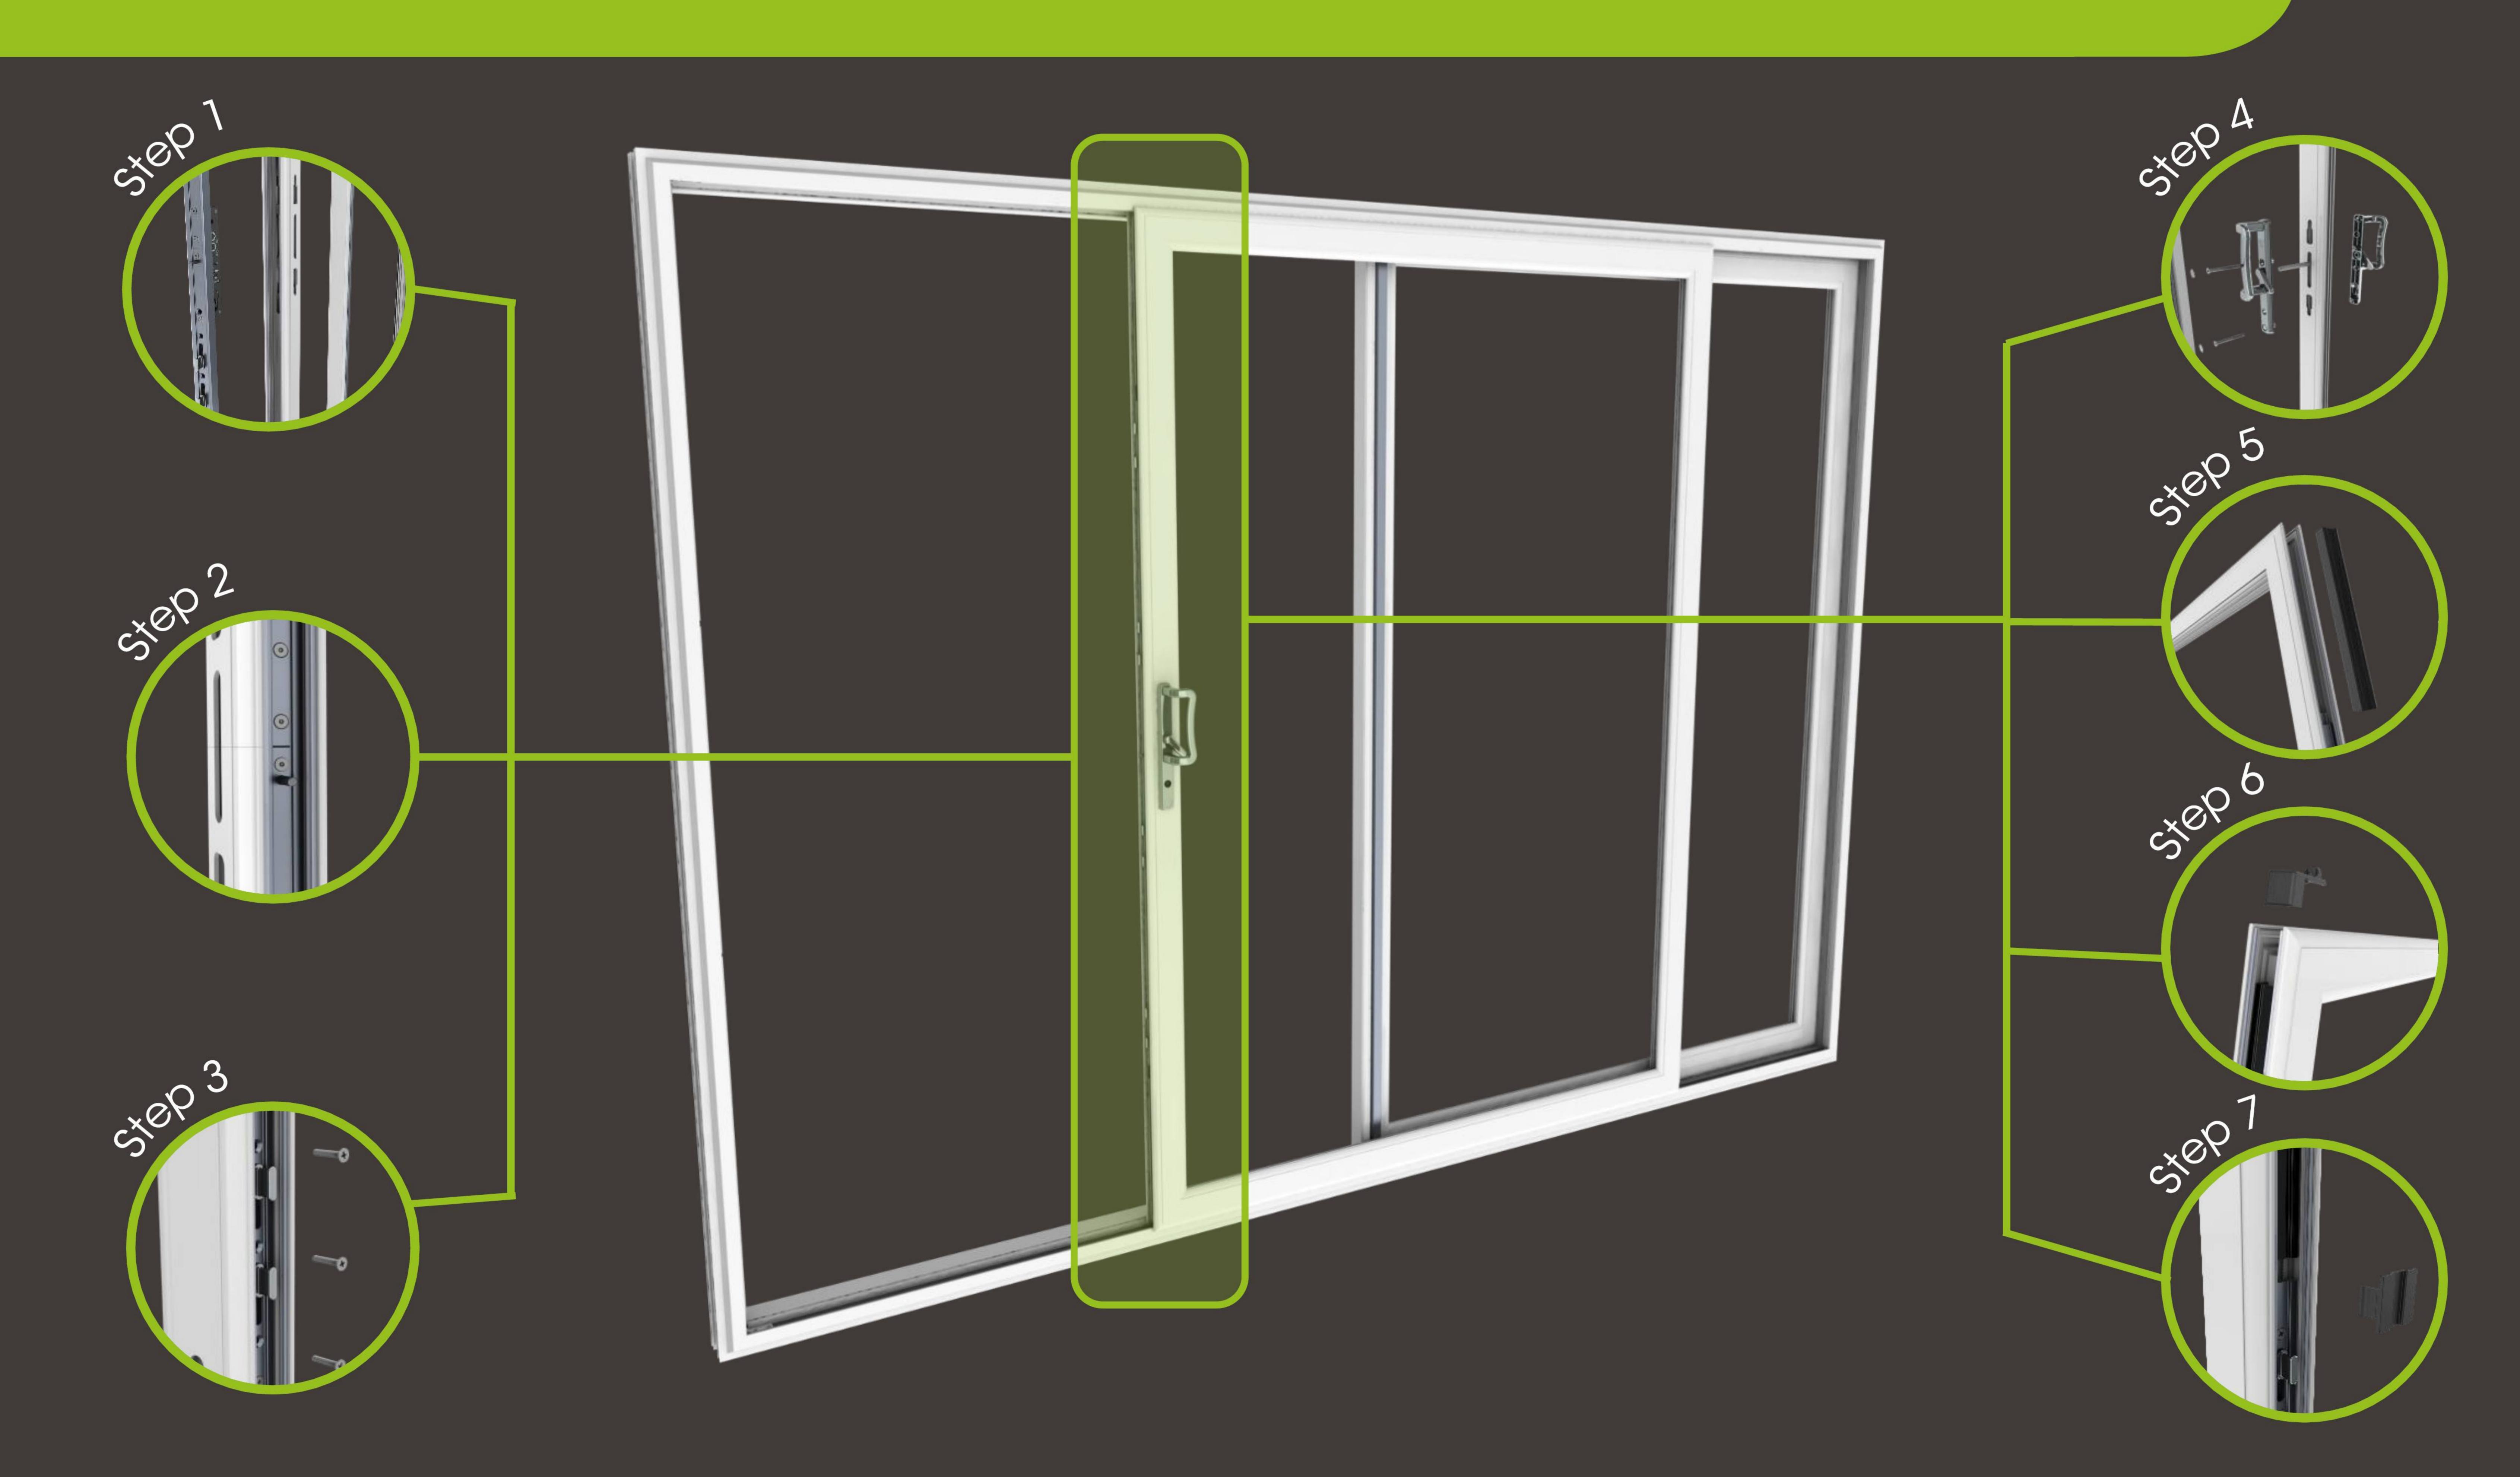

Keep Installation Location – Outer Frame Profile

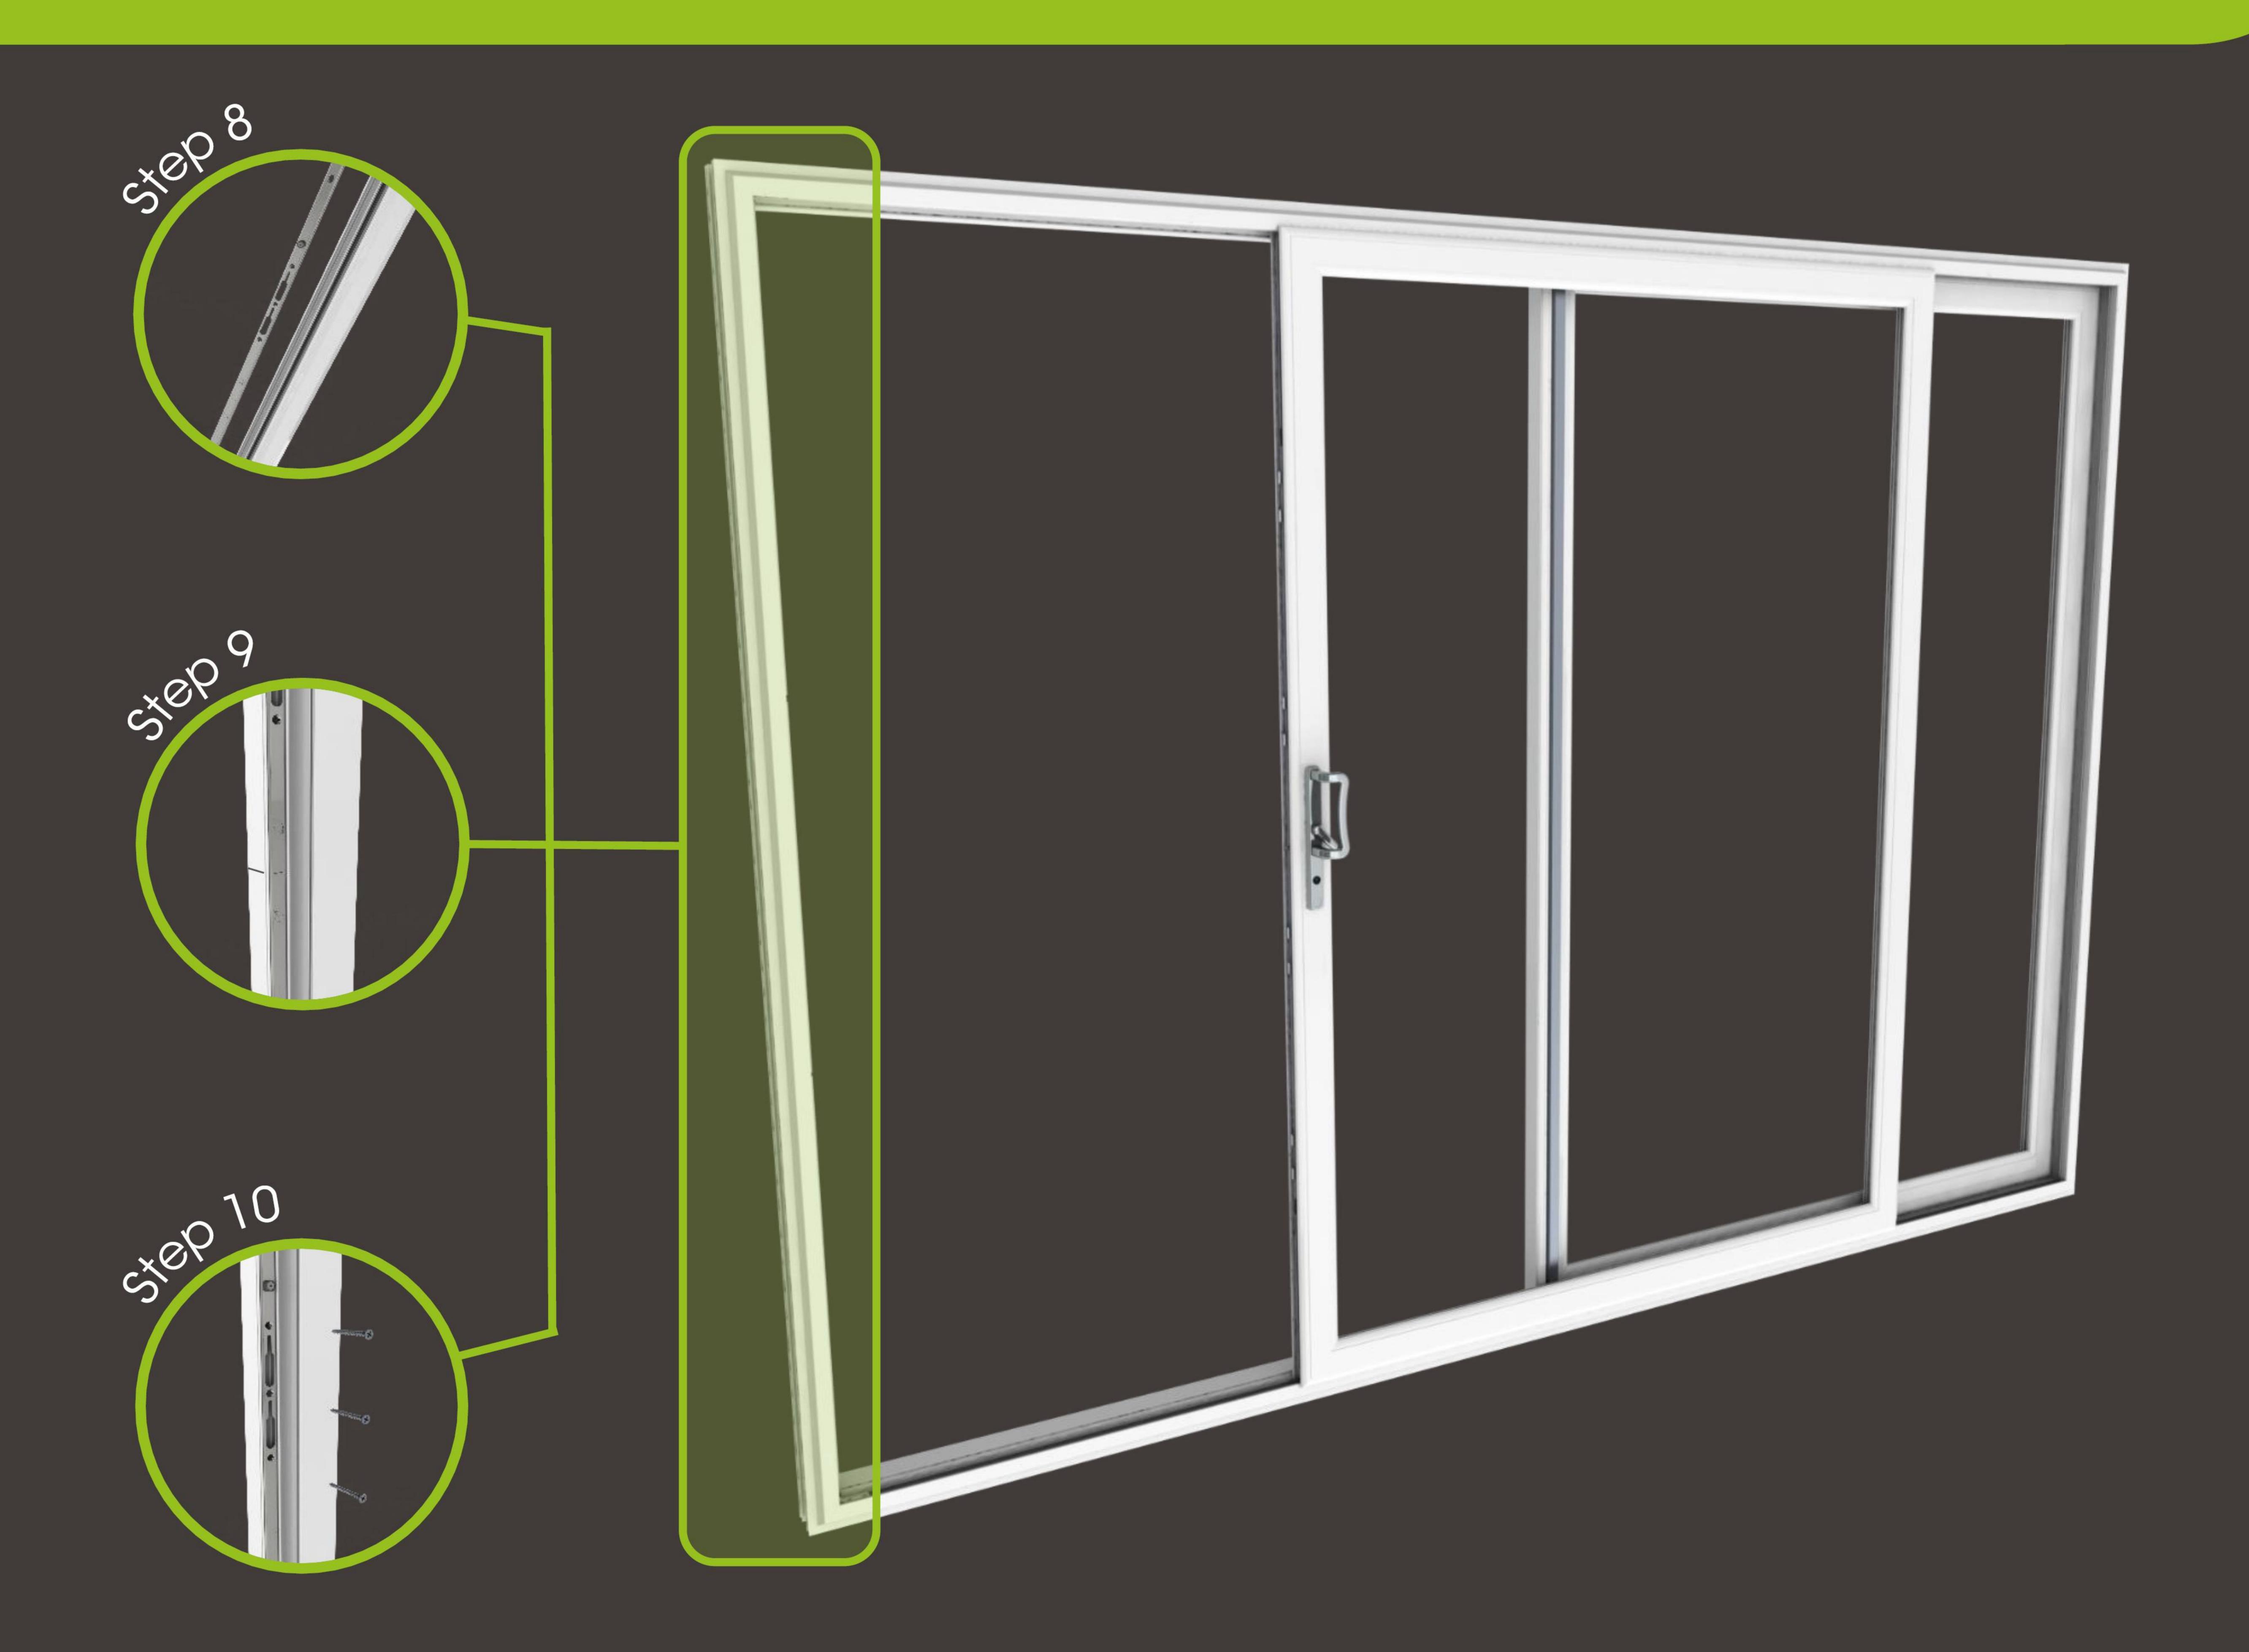


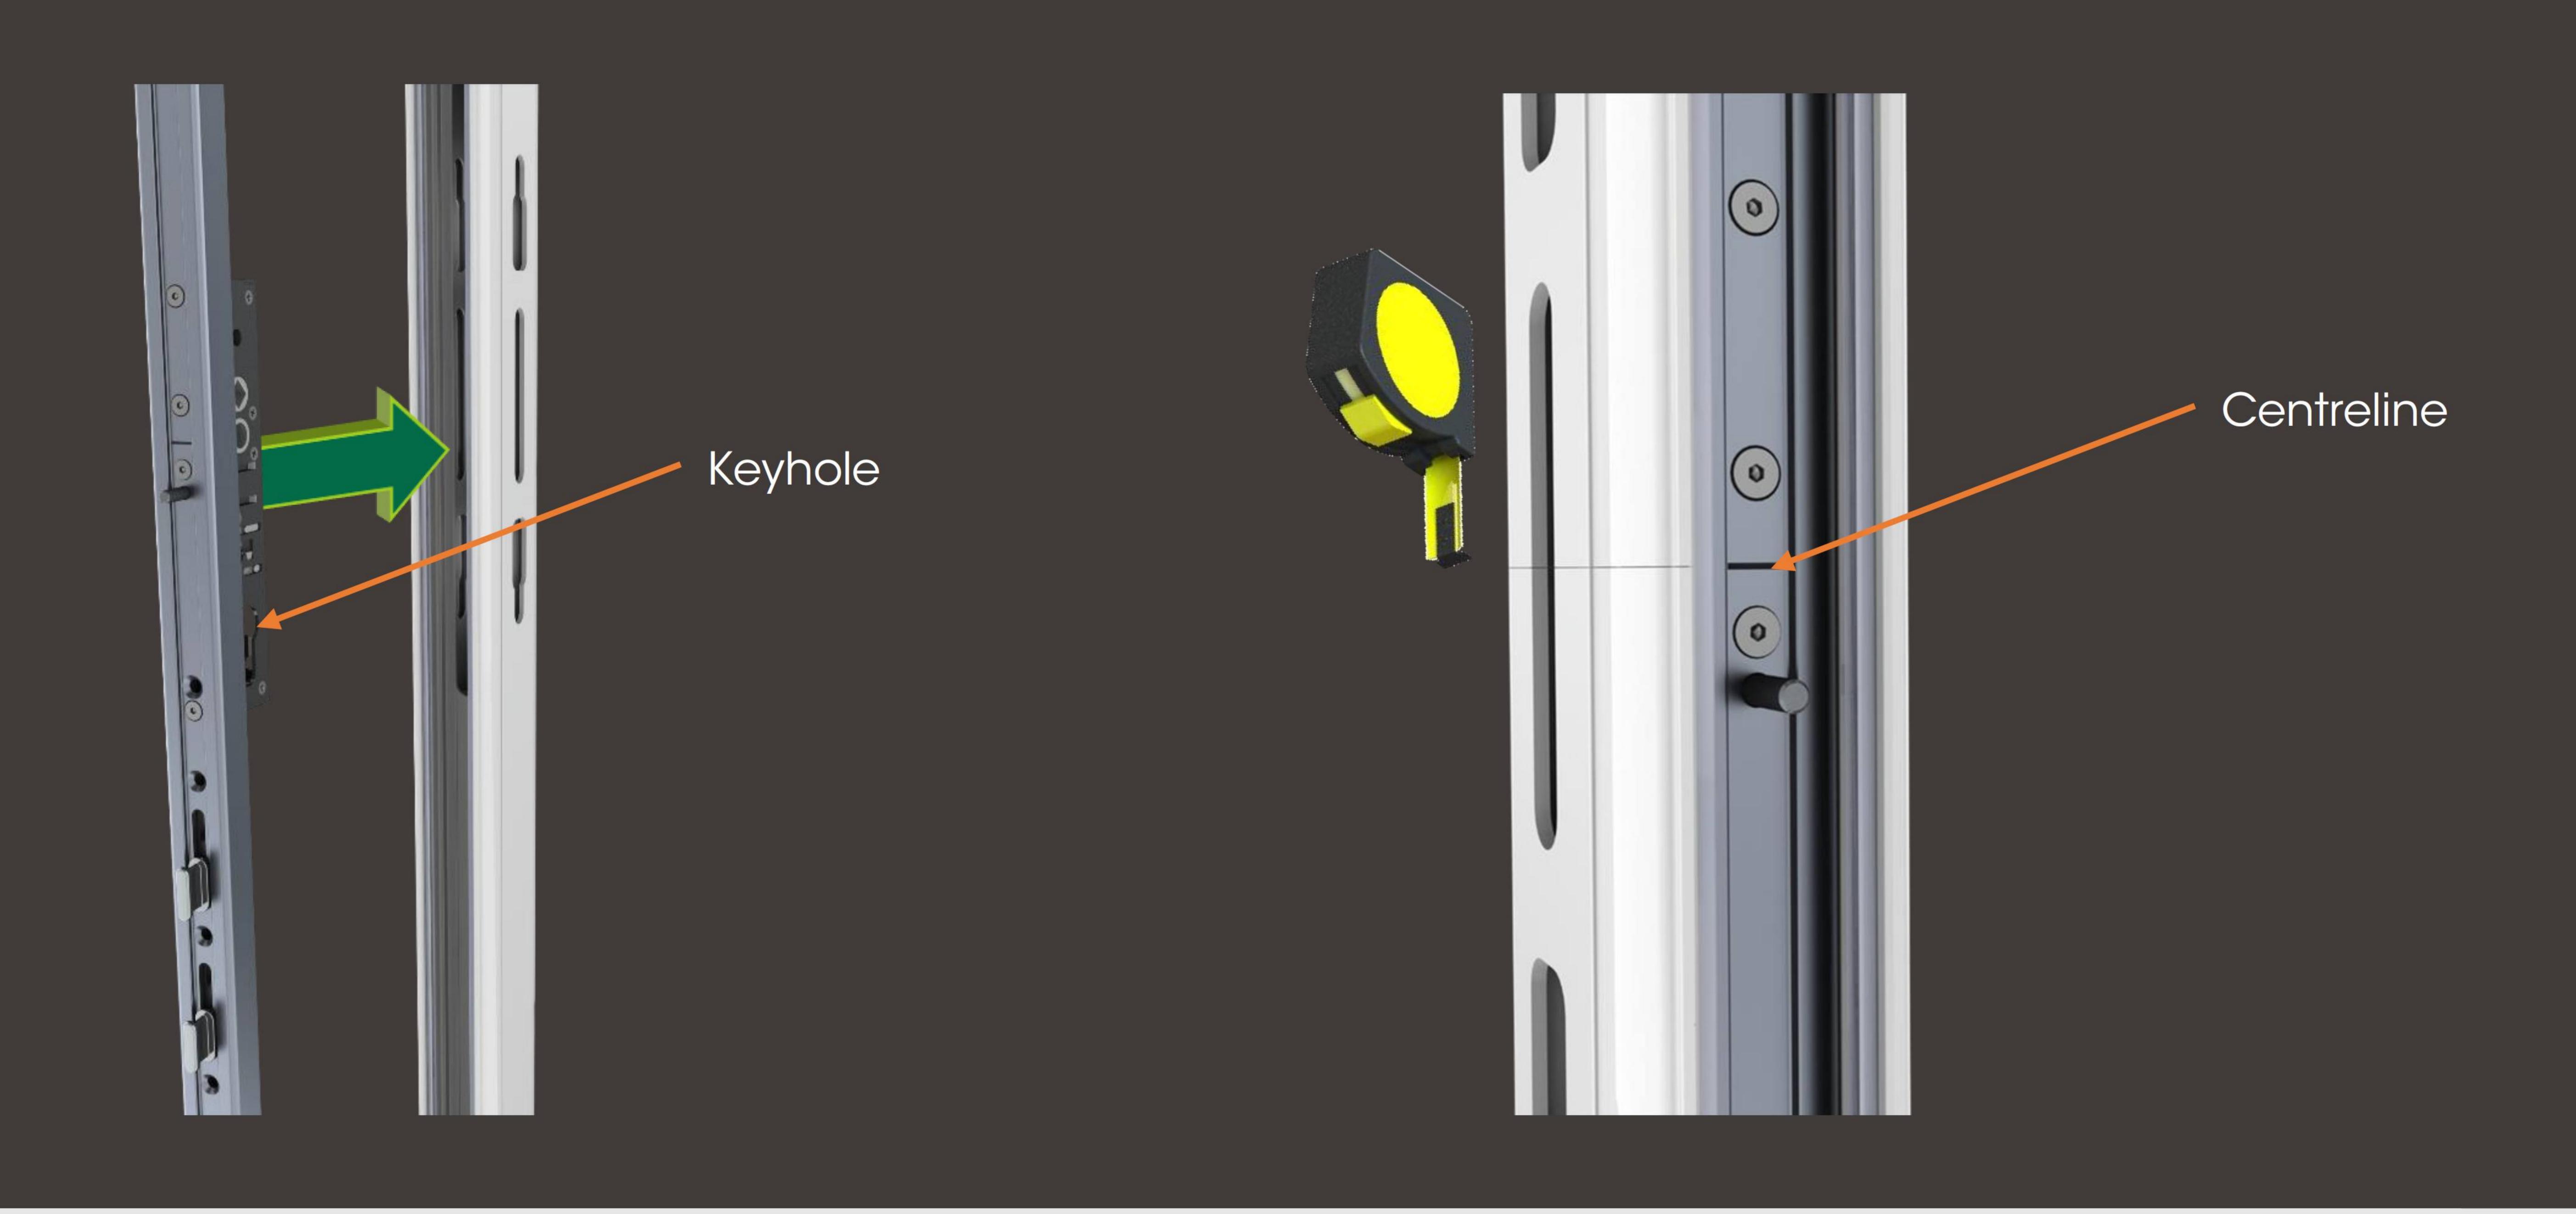

Step 1
Insert Centre Lock into sash profile assuring that the keyhole is at the bottom


Step 2
Measure and mark centre
of sash profile and align
centreline of the Centre
Lock

Step 3 & 4

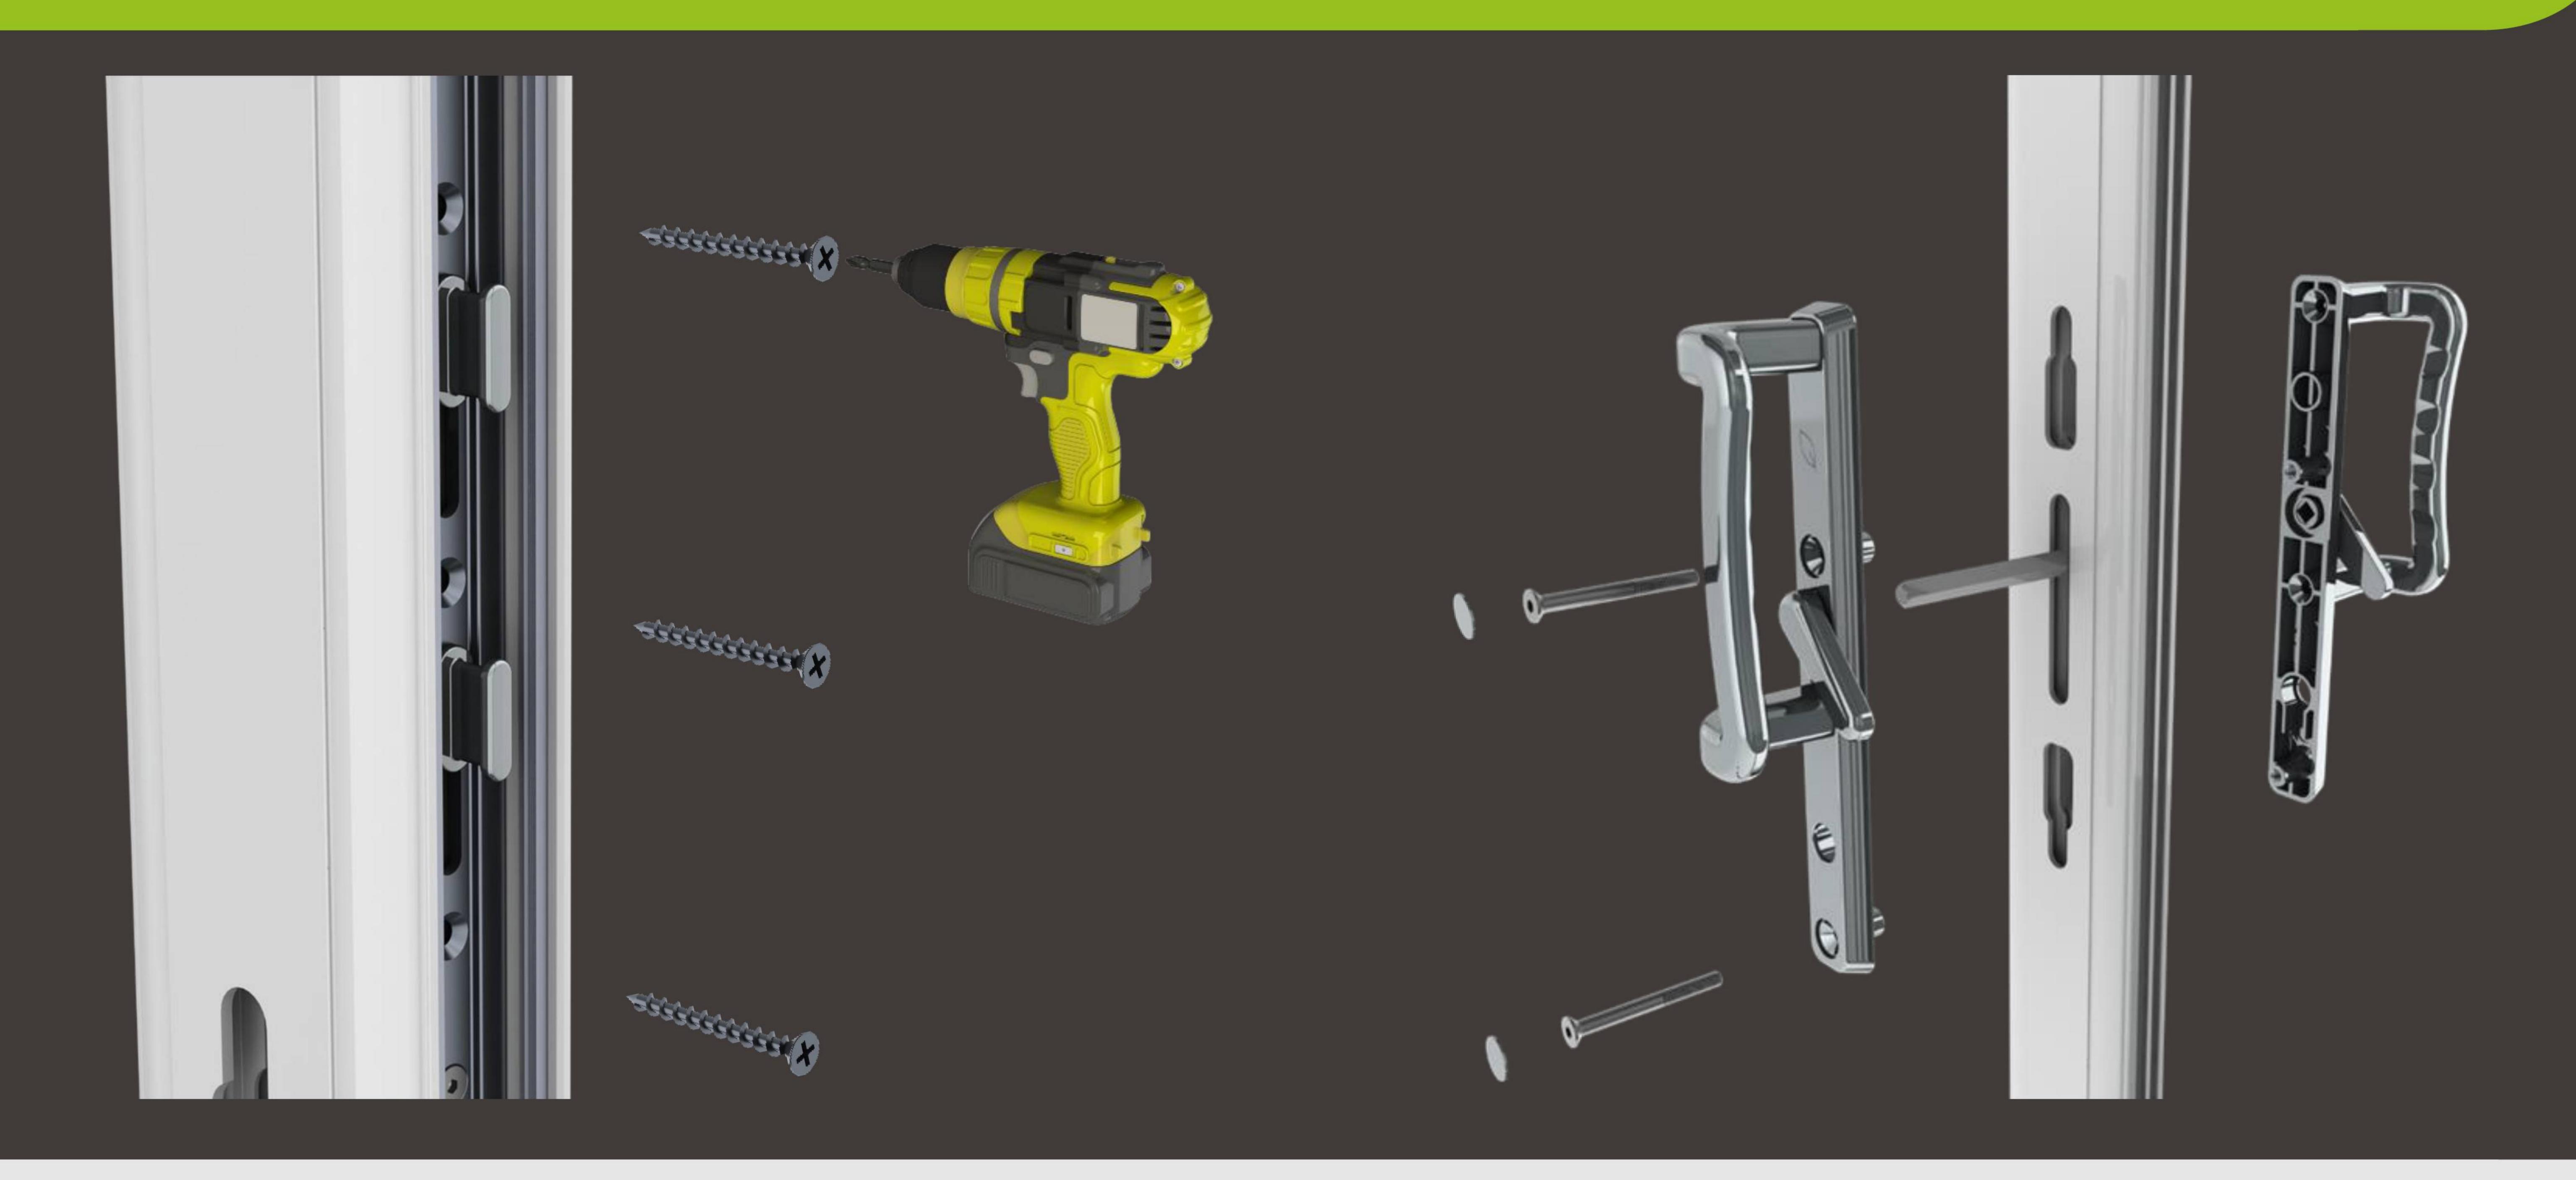

Step 3
Screw Centre Lock into place with appropriate fixings

Step 4
Fit Handle Set

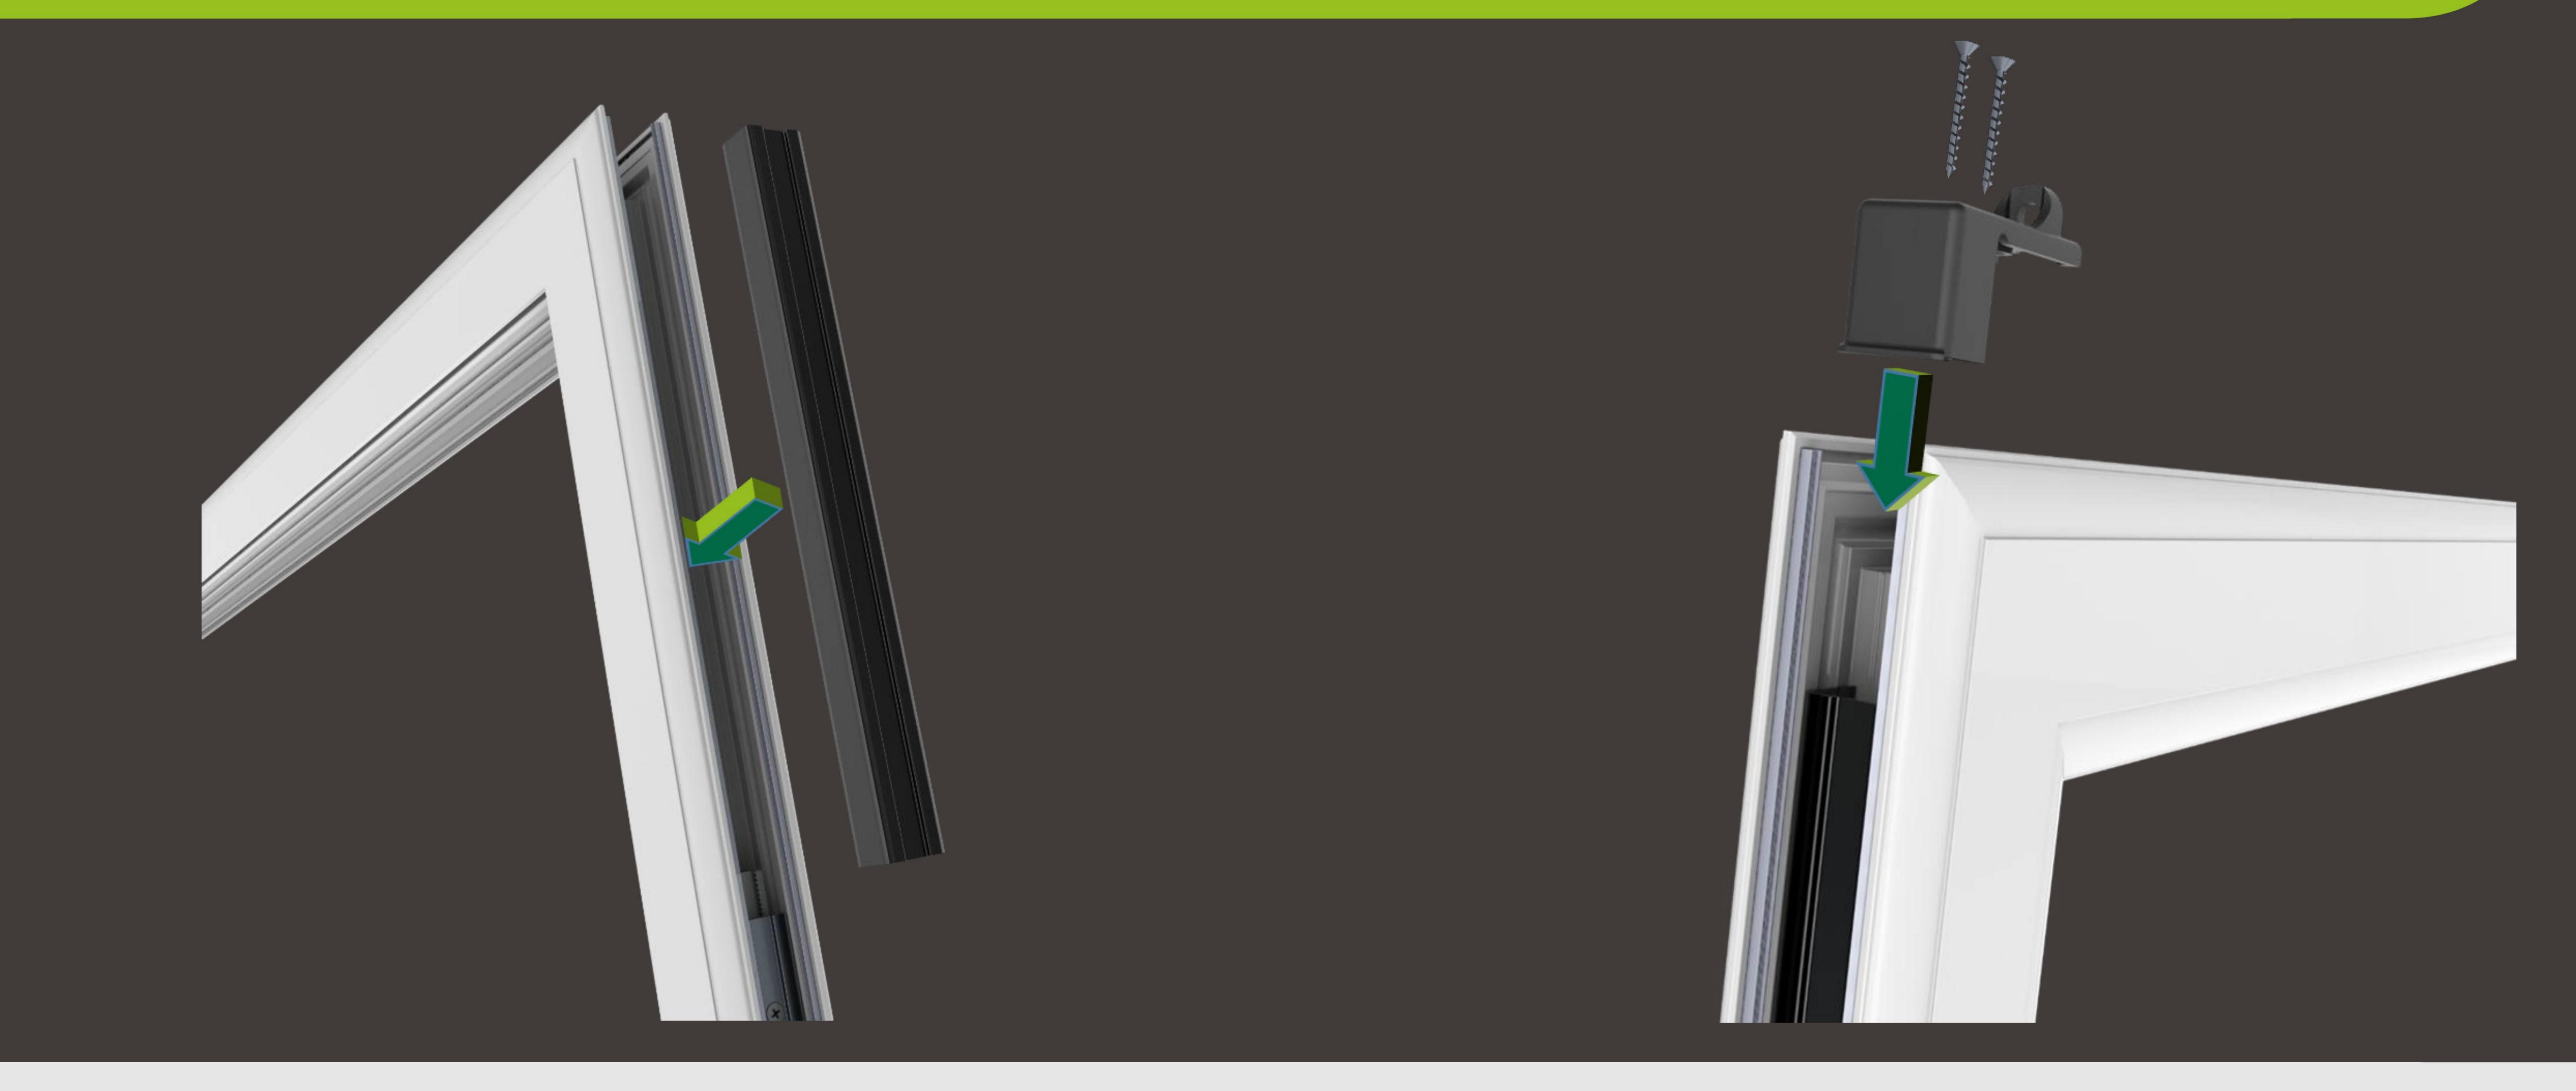

Step 5
Cut Channel Covers to size and insert them into sash profile above and below the Centre Lock


Step 6
Install Corner Covers
top and bottom and
screw into place



Step 7
Insert Facia Clip Covers
between the Centre Lock
and the Channel Covers,
top and bottom

Step 8
Insert Keep into the outer frame profile

Step 9 & 10

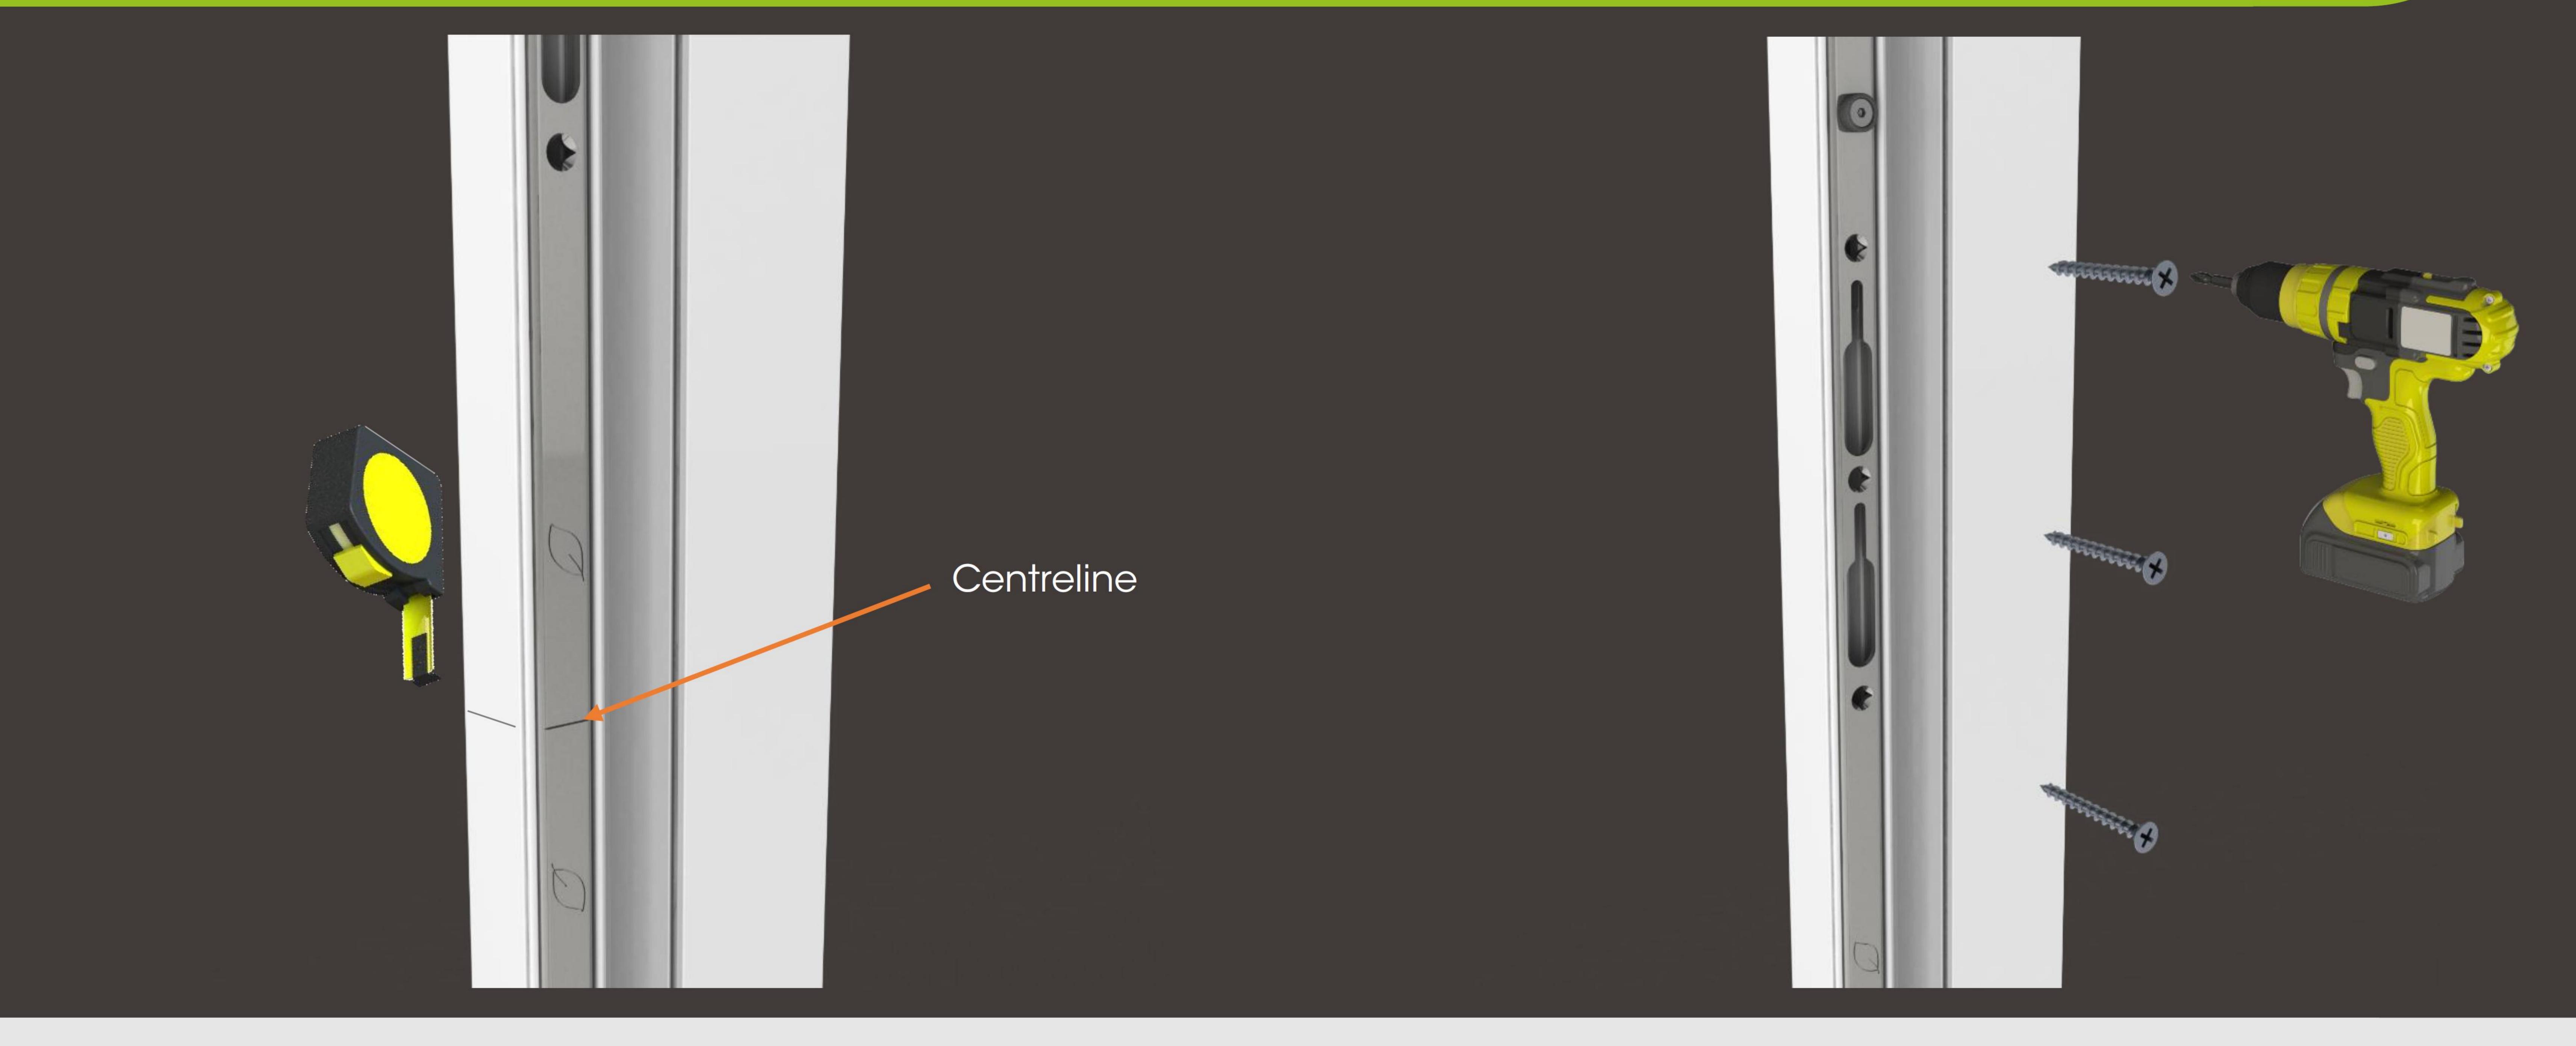

Step 9
Measure and mark
centre point of outer
frame profile, and align
to the centreline of **Keep**

Step 10
Screw Keep into
position using
appropriate fixings